

# MONTREAL VUE™

## WITH DENVER E-RIBBON BASIC BURNER




Montreal Vue is definitely a top model within the range of bio fireplaces. Available with different casings and hardened glass screens, it provides the ultimate biofireplace that no one can go by without look twice.

The flames from the electronic Denver e-Ribbon Basic burner can be adjusted via its control panel, remote control or App.

In addition to the standard version available with the Denver e-Ribbon Basic burner, Montreal Vue can also be ordered in special sizes with the Denver e-Ribbon Fire.

The Denver e-Ribbon Fire bio burner can be produced in any desired length and width, only subject to minimum dimensions. This opens a world of possibilities and allows to produce and adapt Vue to your specific needs.

### STANDARD FINISH



### STANDARD FINISH TOP-PLATE BURNER





### TECHNICAL INFORMATION


Capacity:	7.2L
Burning time:	7.3 - 20 hours
Heat efficiency:	2.1 - 5.7 kW/h
Net weight:	Depending on material
Minimum room size:	115m <sup>3</sup>
Burner:	Denver e-Ribbon Basic 1120
Flametray:	900mm - aluminium
Material casing:	Aluminium
Finish:	Black powder coating Polished Copper / Brushed Copper Polished Brass / Brushed Brass
Finish top-plate burner:	Black powder coating Other finish on request
Glass:	Hardened diamond clear glass Hardened tinted glass (Smoky)
Power supply:	220V - 240V / 50 Hz

### FEATURES

- e-Ribbon™ technology
- Fuel Level Indicator
- Flame Level Indicator
- Bluetooth / App and six flame levels
- Safety Sensors
- 2mm Steel Baseplate
- Safety Chamber
- Glass screens (4 pcs - 2 low and 2 high)
- No chimney required

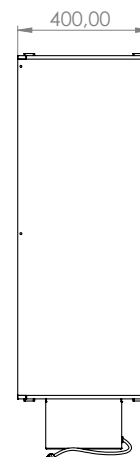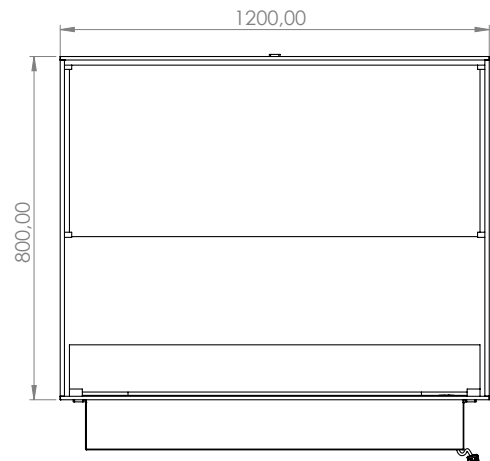

# DENVER E-RIBBON BASIC BURNER

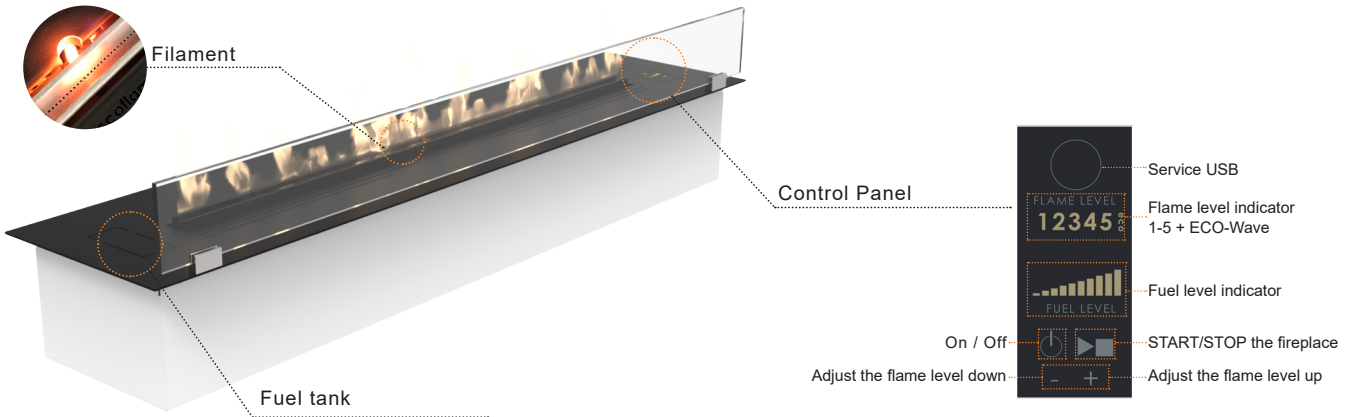

## Operating:

Step 1	Turn on the electronics of your Denver e-Ribbon Basic™ by pressing the  button.
Step 2	Fill in the right amount of bioethanol in the fuel tank by verifying the level on the fuel level indicator.
Step 3	To ignite the fireplace: Press the  button on the control panel. After about 3 minutes, the first flames will appear around the centre of the flame tray.
Step 4	When the filament no longer is red/glow (approx. 10 min) it is possible to adjust the flames.
Step 5	To switch off the fire at any time – also during the warming-up phase – press the  button on the control panel. The flames will disappear within few minutes.



Use the supplied remote control or download the DecoFlame App to your mobile device for controlling the biofireplace.

## Installation of DecoFlame App to the Denver e-Ribbon Basic burner




App Store



Google play


<b>Model:</b>	Denver Basic 720 - black	
<b>Dimensions:</b>	720x215x125mm - Flame Tray 500	
<b>Power Supply:</b>	220/240V - 50Hz must be earthed	
<b>Serial Number:</b>	72000.05.16.V1.001	
<b>Thermal Output:</b>	max 2.9 kW	
<b>Fuel Type:</b>	bioethanol 96%	
<b>Room Volume:</b>	min. 58 m <sup>3</sup>	
<b>Radio Frequency:</b>	433.92 MHz	
<b>Bluetooth Code:</b>	0001	
<b>Manufacturer:</b>	DecoFlame ApS - Made in Denmark	

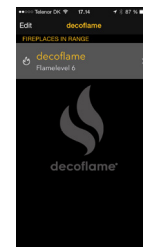


1. Download and install the DecoFlame App corresponding to your smart device's operating system. For more information go to: [decoflame.com](http://decoflame.com).

2. In order to pair your fireplace with your smart device, start the fireplace by pressing the 'ON' button. Start the App and choose your fireplace. Insert the code from YOUR rating plate, like the one highlighted above.


3. Once your device is paired, the fireplace should be visible on the app. You are now able to change the name of the fireplace. **Note:** You are able to pair more than one fireplace like described in the step nr. 2 and give them different names.

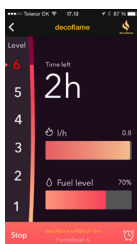

4. Once you have selected your fireplace, you can turn it on by pressing 'START'. If the fireplace has already been turned on using the control panel, you can now monitor the fuel level and the consumption.

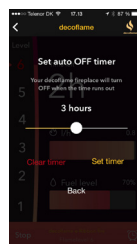

5. For the 'Turn Off Timer' press the clock icon in the lower right corner. To adjust the remaining time, slide the dot to the left and right and select 'SET TIMER'. The remaining burning time can be changed by repeating the above mentioned steps. To cancel the timer select 'CLEAR TIMER'.

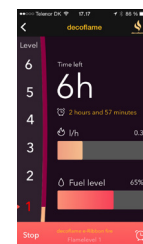

6. For adjusting the flame intensity, select the desired level on the left side of the screen. (1-lowest, 5+ECO Wave or 6-highest depending on the model chosen). Should there not be enough fuel for the selected burning time - the fireplace will shut down automatically. Select 'STOP' to turn off the fireplace.